


ATTACHING THE GUN REST

ASSEMBLY INSTRUCTIONS:

1. ATTACH GUN REST AS SHOWN ON BOTH SIDES.
2. USE D-RING PIN TO LOCK REST IN UP POSITION.
3. REST FOLDS FLAT AGAINST STAND FOR EASY TRANSPORT.

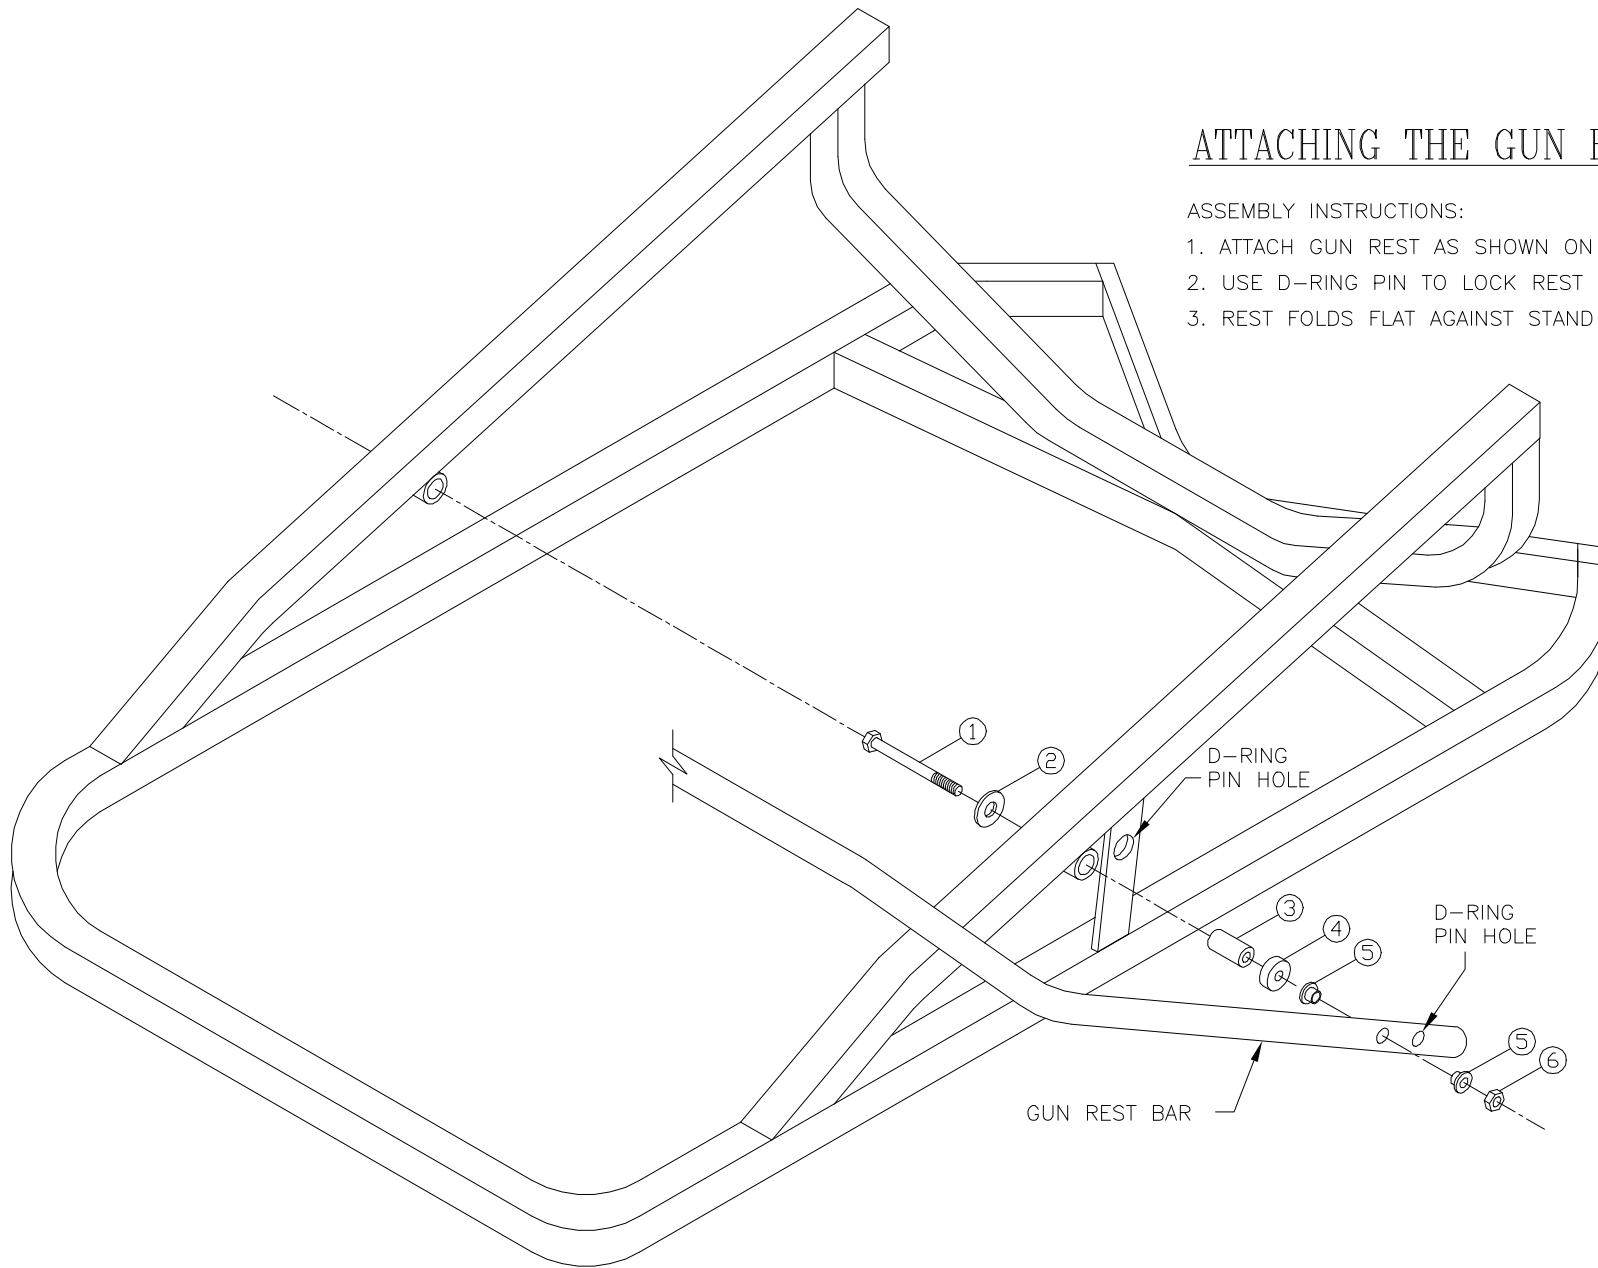

PARTS LIST:

1. $\frac{1}{4}$ " x 3" HEX HEAD CAP SCREW
2. $\frac{7}{8}$ " FLAT WASHER
3. $\frac{1}{2}$ " x 1" LONG NYLON BUSHING
4. $\frac{3}{4}$ " x $\frac{1}{4}$ " THICK NYLON SPACER
5. $\frac{1}{4}$ " ONE-SIDED NYLON BUSHING
6. $\frac{1}{4}$ " LOCK NUT